 


SENATOR roller cabinets and tool chests are designed to help you work safely and efficiently. Storage equipment can be dangerous if the correct operating procedures are not followed. Safety procedures and assembly instructions are as follows:

SAFETY GUIDELINES


LOADING:

- Do not load from the top drawer first.
- Do not drop tools into the drawers.
- Do not completely fill only one drawer.
- Do not load a drawer from the front.
- The maximum product weight, including contents must not exceed 160kg.

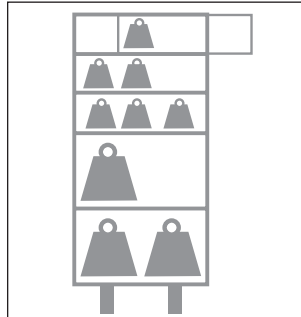


USE:

- Do not open more than one loaded drawer at a time.
- Apply brakes on swivel castors when not moving unit.
- Do not stand on this product.
- Do not slam the drawers shut.

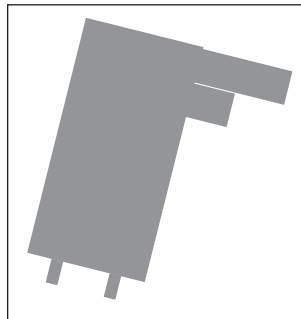



MOVING:

- Close the lid, lock drawers and the door before moving.
- Do not pull. Push to move.
- Keep the product on a level surface.
- Do not tow with power equipment.

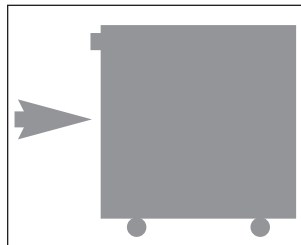

MAINTENANCE:

- Lubricate the top and the bottom channels of the drawer slides at least twice a year with oil.

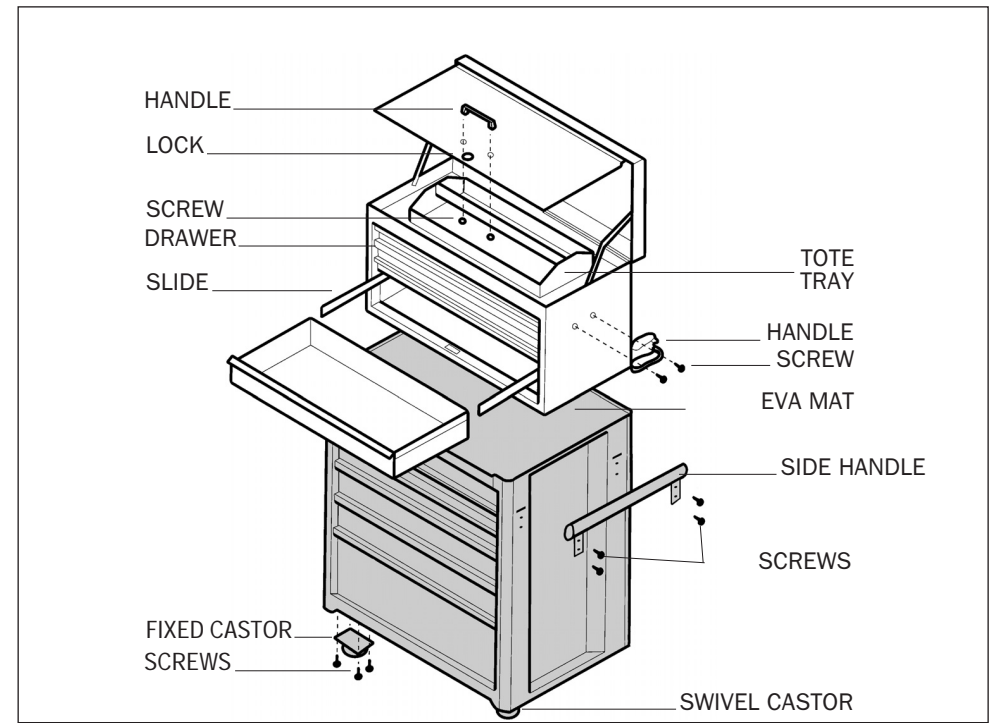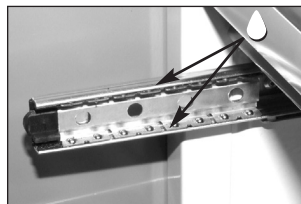


CASTORS:

The roller cabinet is supplied with four castors consisting of two swivel castors with brakes and two fixed castors. Position the swivel castors on the same side as the handle.

SIDE HANDLE:

The side handle must be fixed on the same side as the swivel castors. Insert the brackets through the slots in the side of the cabinet then secure with the four screws provided. See Fig.4

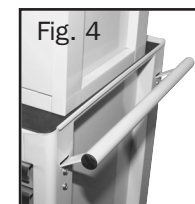

TO REMOVE DRAWERS:

The ball bearing slides have black retaining clips See Fig.1. To remove the drawer, the retaining clips need to be released by pushing the lever down (right hand side of the drawer) See Fig.2 and up (left hand side of the drawer) simultaneously and pulling the drawer out. See Fig. 3

TO REINSTALL DRAWERS:

Pull the slides out and insert a slide on to each side of the drawer. Push the drawer gently in until it is completely inserted. The retaining clips will now be in place. Pull the drawer fully out to check that it will be held.

